

Each shelf can hold a maximum load of 45kg. Please carefully read and follow these instructions to assemble your cabinet.

**ENSURE PROTECTIVE EYEWEAR AND GLOVES ARE WORN WHEN ASSEMBLING THIS UNIT.**


**WARNING: SERIOUS INJURY CAN BE CAUSED BY TOPPLING FURNITURE.** To help prevent tip-over, we recommend you anchor this product to a wall or other suitable surface. Check anchors regularly.

## Step 1


### CHECK PARTS LIST

### TOOLS REQUIRED:


- Phillips Head Screwdriver

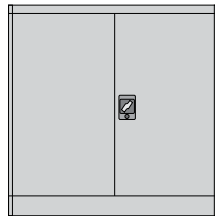

1 x Front Panel  
(Doors & Frame)

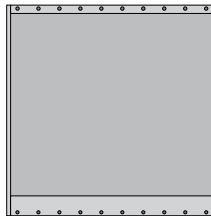

1 x Rear Wall  
(install this way up & face  
detail towards inside of cabinet)

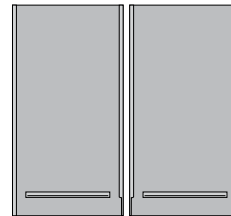

2 x Side Panels



Top



2 x Middle Shelf



Bottom Shelf

There may be minor variations in the appearance of some parts from illustrations due to continued product improvements.



2 x Plastic Covers



10 x Screws



8 x Shelf Supports




2 x Keys

## Step 2



Stand the back and right hand side upright.

## Step 3

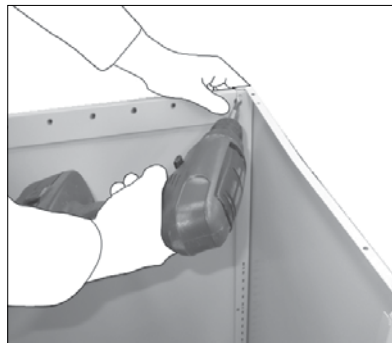

Screw in top and middle screws to secure Back and RH Side.

## Step 4



Repeat for LH Side.

## Step 5




Insert the cupboard door section from the inside of the unit.

## Step 6



Fit bottom shelf making sure side slots line up and that the front of the shelf sits on the lip.

## Step 7

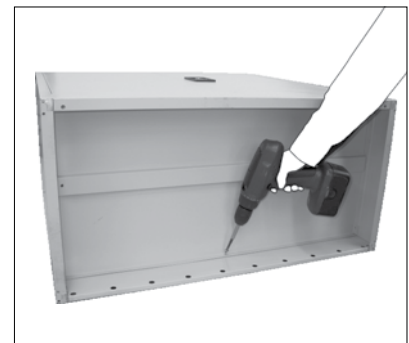

Lay unit on it's back and fix bottom screw in lower shelf.

## TIP

- Get your components ready ahead of the next procedure.
- Use care when using an electric screwdriver not to strip the thread on the screwholes.

### Step 8



Please remove doors to place the top on the unit, front first.

### Step 9



Make sure the top is fitted on all four corners.

### Step 10



Screw top down with 2 screws either side as shown.

### Step 11




Insert shelf supports in the four corners of the unit at same height.

### Step 12



Rest shelf on supports.

### Step 13

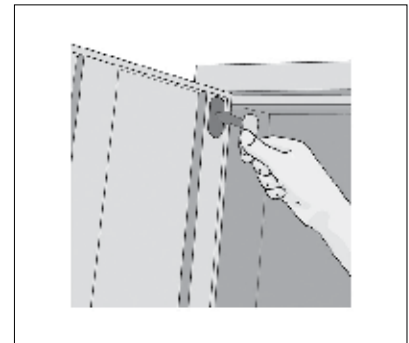

Press in plastic covers.



Finished size: 900mm high x 900mm wide x 450mm deep